
 




















 
 






















Full ("Away") Arming	
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code >  	 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High security mode:  <ul style="list-style-type: none"> > code or use Proximity tag
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code >  	 <ul style="list-style-type: none">  to apply to all partitions, or slide a specific partition to the right under .
 <p>Full Arm all: Security > </p>	 <p>Press </p>
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode:  > code 	 <p>Press </p>
Partial ("Stay") Arming	
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code >  	 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High security mode:  <ul style="list-style-type: none"> > code or use Proximity tag
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode: Code >  	 <ul style="list-style-type: none">  to apply to all partitions, or slide a specific partition to the left under .
 <p>Partial Arm all: Security > press </p>	 <p>Press </p>
 <ul style="list-style-type: none"> ❖ Quick mode:  ❖ High Security mode:  > code 	 <p>Press  or large rounded button (installer-defined)</p>



Partition & Group Arming

❖ Full partition arming:

Code > "Security" menu > "Partitions" tab > select **All** or specific partition

number/s >



❖ Partial partition arming:

Code > "Security" menu > "Partitions" tab > select **All** or specific partition

number/s >





Group Arming: "Groups" tab > press group letter

❖ Full partition arming:



Code >  > select **All** or specific partition number/s > 

❖ Partial partition arming:

Code >  > select **All** or specific partition number/s > 

Group Arming: Press group letter



Note: Supports up to 3 partitions. Does not support Group arming.

❖ Full partition arming:



- **Quick mode:** Partition number > 
- **High Security mode:** Partition number >  > code or use Proximity tag

❖ Partial partition arming:

- **Quick mode:** Partition number > 
- **High Security mode:** Partition number >  > code or use Proximity tag



System Disarming



Code > "Security" menu >



> code or use Proximity tag



Code >



to disarm all partitions, or slide a specific partition to the center under > enter code



Disarm all: Security > > code > press Disarm



Press



❖ Quick mode:



❖ High security mode: > code



Disarm all: Press



Partition & Group Disarming



Code > "Security" menu > "Partitions" tab > select the Partitions to Disarm >



Partition disarming: Code > > select All or specific partition number(s)
Group disarming: >



Partition disarming:

Partition number >



> code

Duress Disarming



Duress code >



Note: Panel is silent (no alarm siren)



> duress code

Note: Panel is silent (no alarm siren)



Bypassing & Un-bypassing Zones




Code > “Security” menu > “Detectors” tab > select a detector (zone) > slide switch to the right to bypass



← > code, ✓ > scroll to Activities menu, ✓ > Bypass, ✓ > Zones, ✓ > scroll to select a bypass option, ✓ .

Viewing System Troubles



Code > from the Top Bar, press  to view troubles



← > code, ✓ > scroll to View menu, ✓ > Trouble, ✓ > scroll to view troubles

Viewing Last Alarm / Event Log



Code > “History” menu > press “All” to view all events, or search an event


Note: You can filter the search according to specific types of events:
All / Alarms / Troubles / Smart Home / Media Events



← > code, ✓ > scroll to Event Log, ✓ > scroll to view events

Viewing System Status



 for 2 seconds



❖ **Quick mode:** #? for 2 seconds

❖ **High Security mode:** #? for 2 seconds > code or use Proximity tag



Press *



❖ **Quick mode:** 4!? for 2 seconds

❖ **High Security mode:** 4!? for 2 seconds > code



Activating Output



Code ➤
"Security" menu
➤
"Utility Output"
tab ➤ select
relevant Utility
Output button,
✓



⏪ ➤ code, ✓
➤ scroll to
Activities menu,
✓ ➤ enter
Utility Output
number, ✓.
Note: Must be
installer-defined



❖ **Quick mode:** Press
button (1–3) for 2
seconds
❖ **High security
mode:** Press button
(1–3) for 2 seconds
➤ code or use
Proximity tag.
Note: Must be
installer-defined



❖ **Quick mode:** Press button (1–3) for 2 seconds
❖ **High security mode:** Press button (1–3) for 2 seconds ➤ enter code.
Note: Must be installer-defined





Activating a Panic Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press  and  together for at least 2 seconds.



Press **1** and **2** together for 2 seconds







Press  and  simultaneously



Press  and  together for 2 seconds.

Activating a Fire Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.







Press **4** and **5** together for at least 2 seconds.



Press **3** + **4** together for 2 seconds

Activating an Auxiliary Emergency Alarm



Press the Emergency button  (located at the top of the Lock Screen or at the end of the main menu) >  > press  and  together for 2 seconds.



Press **7** + and **8** together for at least 2 seconds.



Press **5** + **6** together for 2 seconds



SMS Commands

NOTES: Command words are not case sensitive. A separator between command words may be used (or not). To receive an acknowledgement reply, add **RP** to the end of an SMS command.

Full Arm: code + A (Example: 1234A)

Get system status: code + ST

Home Arm: code + H

Bypass Zone: code + B + zone number

Group Arm: code + G + select group A--D

Un-bypass Zone: code + UB + zone number

Full Disarm: code + D

View last alarm : code + AL

Partition Full Arm: code + A: + partition number

Change FM number: code + FMPHONE + FM serial number + NEW + new phone number

Partition Home Arm: code + H: + partition number

Activate Output: code + UOON + UO number

Deactivate Output: code + UOOFF + UO number

Multiple Partition Full/Home Arm: code + A/H: + partition number A, + partition number B, + partition number C, etc.

Get SIM credit level: code + CR

Partition Disarm: code + D: + partition number

Get SIM credit level: code + CR

Multiple Partition Disarm: code + D: + partition number A, + partition number B, + partition number C, etc.

LED Indicators – Elegant Keypad

Power LED

On: Power OK.

Off: No power

Rapid flash: System trouble.

Slow flash: System is programming

Ready LED

On: Ready to arm

Off: Not ready to arm

Slow flash: Ready to arm while entry/exit zone is open

Arm LED

On: System in fully armed mode

Off: System disarmed

Rapid flash: Alarm

Slow flash: System in Exit Delay

Partial Arm / Bypass LED

On: System in partially-armed or zone-bypassed mode

Off: No bypassed zones

Tamper LED

On: Tamper alarm

Off: No tamper alarm

Fire LED:

On: Fire alarm

Off: No fire alarm

Flash: Fire circuit trouble



LED Indicators – 2-Way Remote Control

Operation	Send command*	Receive Status
Full Arm	Green	Red
Partial Arm	Green	Orange
Disarm	Green	Green
Alarm	Green	Flashing LED

* If the LED changes to orange, it indicates a low battery condition.

Defining User Codes – Elegant Keypad

1. ➤ Grand master code (default = 1234) ✓
2. to scroll to **Codes/Tags** ➤ press ✓ twice.
3. to scroll to the user (index number) for defining ➤ press ✓ twice.
4. Enter (or re-enter) a 4–6 digit code, ✓ ; the system beeps and **ACCEPTED** displays

Registering to the RISCO Cloud

- 1 After the RISCO Cloud has been enabled by your system installer, go to **www.riscocloud.com**
- 2 Fill in your **first and last name**.
- 3 Enter your **e-mail address** as the Login Name (required for 1st-time activation).
- 4 Define **password** (minimum of 6 characters and at least one digit), and then confirm.
- 5 Enter the **15 digits Panel ID** as it appears as printed on the postcard packaged with the main panel. You can also view it on the keypad (see the ProSYS Plus User Manual).
- 6 Complete registration form, and then press **Register**.
- 7 Open the e-mail received at the email account you had defined as the Login Name in step 3, and then click the link to activate your registration to the Cloud.

Logging in to the RISCO Cloud / Accessing the Web User Application

- 1 Go to **www.riscocloud.com**
- 2 Enter your **user name** and **password** (as defined during the registration process).
- 3 Enter the **system PIN code** (user code).
- 4 Click **Enter**.

iRISCO Smartphone App

Download the iRISCO Smartphone app from the Apple App store or the Android Play Store.

For additional information see the ProSYS Plus User Manual, available on our website: **www.riscogroup.com**

© RISCO Group 2020. All rights reserved.